

World Leader in Swine Production Solutions



# Aqua Chief Cup Waterer



IA: 866-464-7528 • NC: 800-949-4647  
[www.hogslat.biz](http://www.hogslat.biz)

# Aqua Chief Cup Waterer

- Reduced pumping costs - your pits fill up more slowly
- Reduced medication costs - less medicine in the pit
  - Less corrosion of equipment and erosion of slats
  - Less wet area in the pen
- Improved time between pumping

## Save on water and medication.

We tested the Aqua Chief cup waterer against a traditional hanging waterer, and the results were obvious. Over 31% less water was used when the Aqua Chief is in place!

When water spills from the waterer directly into the pit, there's more going down the drain than you may think! It's bad enough to waste thousands of gallons of water. But, when that water contains medication, the loss triples!



## TEST RESULTS Farm #8, Building #6

Statistic	Side A (Hanging Waterer)	Side B (Aqua Chief)
Placement Date Average	1-12-2000	1-17-2000
Average Date Sold	5-17-2000	5-17-2000
Average Days	126	121
Number of Head Placed	504	506
Number of Head Sold	471	473
Death Loss Percentage	6.55	6.52
Average Weight at Placement	42.82 lbs.	46.89 lbs.
Average Weight Sold	258.02 lbs.	258.13 lbs.
Feed Conversion Ratio	2.59	2.43
Average Daily Gain	1.684 lbs.	1.719 lbs.
Beginning Meter Reading	22,377	18,248
Ending Meter Reading	148,062	104,334
Number of Gallons Used	125,685	86,086

**39,599 Gallons Less!** vs. Hanging Waterers

**31.5% Less Water!**



## Easy to Install and Maintain

The Aqua Chief installs easily in any size pen. With our sturdy mounting packages, it's easy to install cups back-to-back or in a single configuration. The unique top mounting holds the 48" stainless steel pipes securely in place. The pipe allows you to use almost any hose on the market.

Nipples are easily removed, too! Cleaning and maintenance is simple, and three orifice settings allow you to choose the flow!

### INSTALLATION AND PLACEMENT GUIDELINES:

Our studies show that placement is critical to the efficient use of cup waterers.

Follow these guidelines for the best results:

- Cups should rest 6" from the floor to the bottom lip of the bowl.
- Place the feeder no closer than 19" to the edge of the bowl to reduce excessive feed in the bowl or feeding pigs blocking access.
- Install no farther than 36" from the feeders - reduces the likelihood of pigs dunging the cup.