



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

800-523-8499 • www.dosatronusa.com


Proper protection, such as gloves, eye wear, and aprons, are recommended when disassembling a Dosatron.

DM11F Troubleshooting - Part 2B


This DM11F Troubleshooting will cover: The medicator is not clicking.



Step 1: If you install the medicator and it still doesn't click, remove the eleven nuts and bolts around the lid.

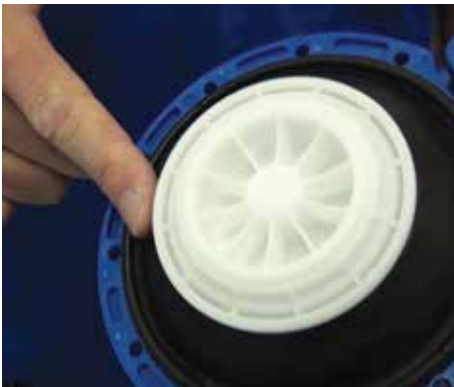

Step 2: Inspect the black rubber diaphragm (PJDI127). If it has damage or bleeds off on your fingers, replace it.

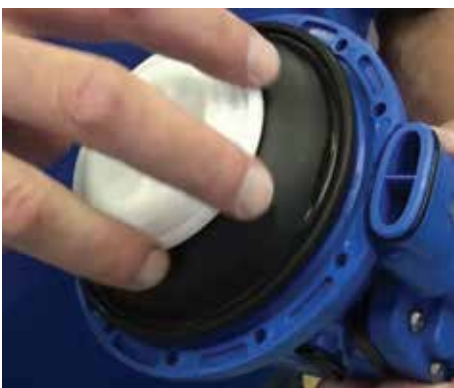

Step 3: To remove, unscrew the diaphragm assembly and discard. Install the new part and hand tighten.



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

800-523-8499 • www.dosatronusa.com

Proper protection, such as gloves, eye wear, and aprons, are recommended when disassembling a Dosatron.

DM11F Troubleshooting - Part 2B



Step 4: Pull the connector up. This will ensure that the thick outside edge will be in the groove.



Step 5: Position the lid on top of the housing.



Step 6: Install the eleven nuts and bolts, tightening in a star pattern.