


SCALEBLASTER AG Coil Wrap Locations for de-scaling Cool Cell Pads

Electrical input should be tied to the Pump Motor power source to cycle ON/OFF with the Pump.

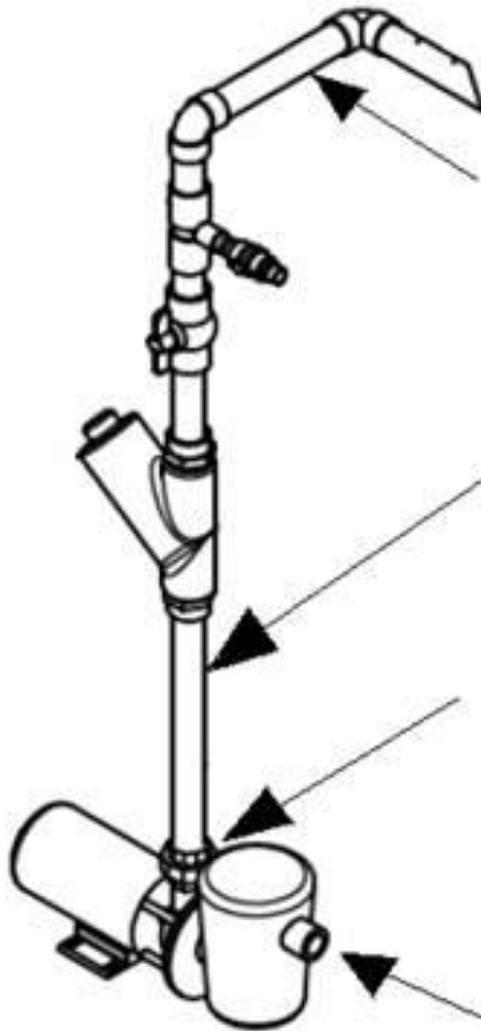

Good Coil Wrap Location

Good Coil Wrap Location

Keep Coil Wrap away from Pump Pipe Joint where water may cause cavitation

Install on oncoming water line ONLY if you want to de-scale the pump. Not recommended if using only one SB AG unit to control scale in the Pads



CLEARWATER CUSTOMER SERVICE - 800-756-7946